


# EXPONA® Design Floor Advice Sheet



Designs: 5105, 5106

It is recommended that due to the emboss design the tiles should be laid in the same direction as indicated by the arrows on the reverse of the tiles and below.

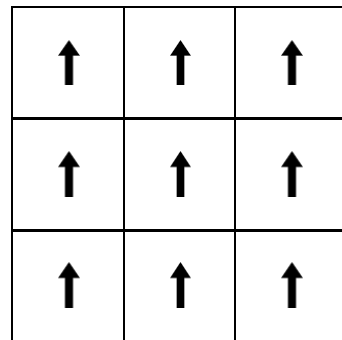

Designs: 4111, 4112

- It is recommended to alternate the wood grain directions, to achieve a chevron effect installation as shown left and below.
- Randomly stagger the planks to ensure a totally natural optimal effect
- Ensure the planks are staggered 150 mm (6") minimum to give the optimum effect.
- The alternating emboss direction of each plank will then be highlighted to the end user giving the full effect of this design.

