

LUXURY VINYL TILE WITH PUR

MAINTENANCE REGIME






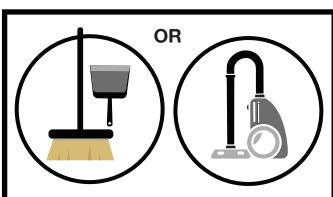



- > Ensure that all traces of adhesive are removed from the surface of the floor covering.
- > Sweep or vacuum to remove dust and grit.

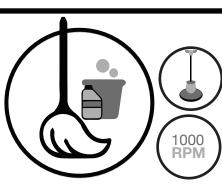


Damp mop with a neutral detergent.

> If required, dry buff with a 1000 rpm plus rotary machine fitted with 3M red or white pads.









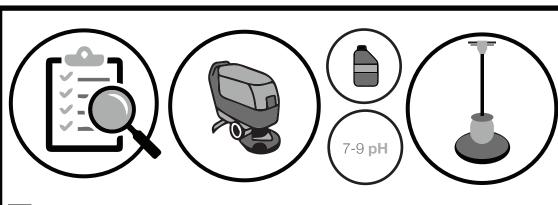



- Assess the appearance of the floor.
 - > If required, scrub with scrubber dryer (165 rpm) fitted with 3M red or green pads, and using neutral cleanser (pH 7 to 9).
 - > If required, dry buff (1000 rpm) fitted with 3M red or white pads to restore finish.

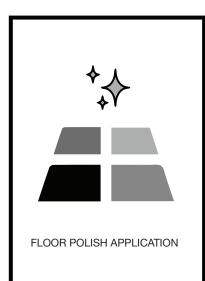

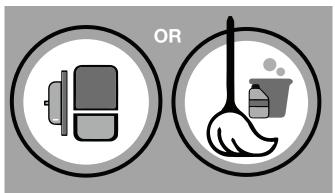

Kentucky mop with wringer and bucket.

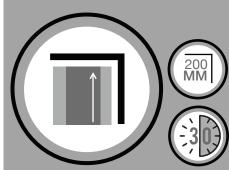

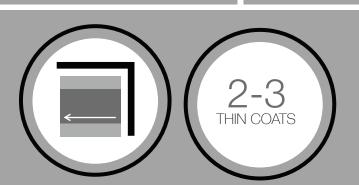

- When the first coat is dry, a second coat should be applied at right angles to the direction of the first.

 > Subsequent coats should be applied at right angles, and the final coat should be applied right up to the skirting.

 > Two to three thin coats are usually sufficient to provide excellent resistance to abrasion, scuffing and removal of black heel marking.



ADDITIONAL INFORMATION

EXPONA

- > Always follow the Health and Safety guidance provided.
- > In order to minimise costs, subsequent polish applications may be appilied only to high traffic areas.
- > The cleaners and detergents should be diluted as per the manufacturers' instructions.

If in doubt please contact Polyflor Canada.

For more detailed information visit, www.polyflor.ca or e-mail tech@polyflor.ca with any maintenace questions.

Polyflor Canada Inc. Tel: +1 905 364 3000 Email: sales@polyflor.ca