

POLYSAFE WITHOUT PUR

MAINTENANCE REGIME



INITIAL CONSTRUCTION CLEAN




OR



- 1 Remove all loose debris.
> Ensure that all traces of adhesive are removed from the surface of the floor covering.
> Sweep or vacuum to remove dust and grit.



- 2 Apply a solution of alkaline cleanser to the floor
> Diluted to the manufacturer's instructions and leave for sufficient time to react with the soiling.

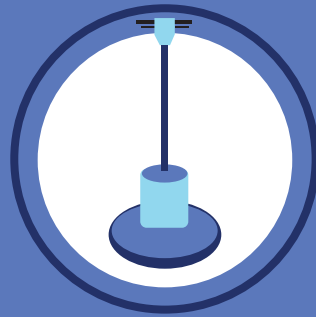


165
RPM



- 3 Use a 165 rpm rotary machine fitted with a scrubbing pad
> Machine scrub the floor and then pick up the slurry with a wet vacuum.



- 4 Rinse the floor thoroughly with clean warm water
> Pick up with a wet vacuum and leave to dry thoroughly.

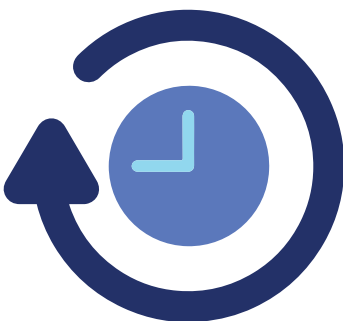

ROUTINE MAINTENANCE



OR



OR



- 1 Sweep, mop sweep or dry vacuum the floor, to remove dust and loose dirt.
> Spot mop regularly. Stubborn black marks can be removed by using the centre disc of a scrubbing pad and a small amount of undiluted alkaline cleanser.



165
RPM



- 2 Apply a solution of diluted neutral or alkaline cleanser to the floor and leave for sufficient time to react with the soiling.
> Use a 165 rpm rotary machine fitted with a scrubbing pad to scrub the floor



- 3 Rinse the floor thoroughly with clean warm water
> Pick up with a wet vacuum and leave to dry thoroughly.



ONGOING MAINTENANCE



- 1 Assess the appearance of the floor.
> The frequency of each of the operations is dependent upon the type and intensity of traffic as well as the appearance expectations and should be adjusted to suit.



ADDITIONAL INFORMATION

> Always follow the Health and Safety guidance provided.
> A twister or any other abrasive pad containing diamond shreds should not be used on any Polysafe ranges under any circumstances.

If in doubt please contact Polyflor Canada.

For more detailed information visit, www.polyflor.ca or e-mail tech@polyflor.ca with any maintenance questions.

Polysafe™

Polyflor Canada Inc.
Tel: +1 905 364 3000
Email: sales@polyflor.ca