
POLYSAFE FOR WET ROOMS WITH PUR

MAINTENANCE REGIME






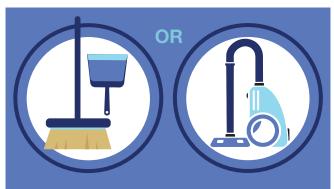

- Remove all loose debris.
 - > Sweep or vacuum to remove dust and grit.
 - > Spot scrub regularly with a deck brush.




- 2 Apply a solution of alkaline cleanser to the floor
 - instructions and leave for sufficient time to react with the soiling.

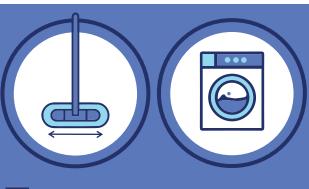

mop, using a continuous side-to-side motion. > Launder the dirty mop heads in preparation for reuse.




- Rinse the floor thoroughly with clean warm water
 - leave to dry thoroughly.

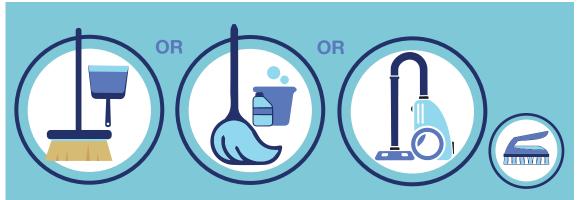

Sweep, mop sweep or dry vacuum the floor, to remove dust and loose dirt. > Using a scrubbing brush or a cylindrical type scrubbing machine.



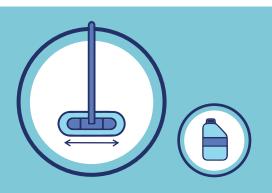

Apply a solution of diluted neutral or alkaline cleanser to the floor and leave for sufficient time to react with the soiling. > Pick up the solution with a clean microfibre mop, using a continuous side-to-side motion.




3 Launder the dirty mop heads in preparation for reuse.



with clean warm water.

Rinse the floor thoroughly > Pick up with a wet vacuum and leave to dry thoroughly.

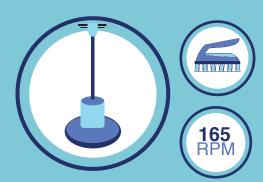

> For heavy soiling Use a 165 rpm rotary scrubbing machine, deck scrubber or mop and bucket system with the appropriate neutral or alkaline cleanser.

ADDITIONAL INFORMATION

Polysafe

- > Always follow the Health and Safety guidance provided.
- > Maintainers, polishes or floor dressings containing polish should never be applied to Polysafe PUR ranges, as this may impair slip resistance
- > Cleaners and detergents should be diluted to the manufacturer's instructions and left for sufficient time to react with the soiling.
- > A twister or any other abrasive pad containing diamond shreds should not be used on any Polysafe ranges under any circumstances.

If in doubt please contact Polyflor Canada.

For more detailed information visit, www.polyflor.ca or e-mail tech@polyflor.ca with any maintenace questions.

Polyflor Canada Inc. Tel: +1 905 364 3000 Email: sales@polyflor.ca